DA-816 FIRMWARE UPDATE INSTRUCTIONS

The DA-816 can be updated with a PC application.

- 1. Download the DA-816 Update Application from http://www.digitalaudio.com/support.
- 2. Connect the USB port on the DA-816 to a Windows computer.
- 3. Wait for DA-816 drivers to fully install.
- 4. Run DA-816 Update Application. A second set of drivers will be installed at the start of this process and may take a few minutes. Once the updater has started, a progress bar will appear. Do not turn off the power until the update is complete or you may damage the unit.
- 5. PRESS Finish.
- 6. Disconnect the DA-816 from the PC.
- 7. Power cycle the DA-816 and the MIX-16/MIX-32.
- 8. Verify the update was successful by checking the firmware version with a CS-SOLO/CS-DUO.

