

LM-DANTE-EXP FIRMWARE UPDATE

DANTE CARD UPDATE

It may be necessary to update the Dante option card to keep current with networking standards and to stay compatible with third party products. To determine if you need to update your Dante card, go to the Livemix Version Info screen by pressing Mix Tools, then Global Configuration, then Livemix Version Info. If the Dante Version is lower than the version available at <http://www.digitalaudio.com/support>, follow the instructions below to update the firmware.

Livemix Version Info		X
CS Version	Bootloader: 1.04 Firmware: 2.00 Comm Hub: 1.00	Update Firmware
MIX-16/32 Version	Bootloader: 1.20 Firmware: 2.00	Update Firmware
DA-816 Version	Firmware: 1.10 Firmware: 1.10	
Dante Version	15.2.24.163	

TO UPDATE THE FIRMWARE OF THE DANTE OPTION CARD (LM-DANTE-EXP):

1. Visit <http://www.digitalaudio.com/support> to download the the latest Dante Firmware Update Manager.
2. Download the MIX-16/32 update file from <http://www.digitalaudio.com/support>.
3. Connect your computer to the MIX-16/32 with an Ethernet cable or connect to the same switch that the MIX-16/32 is connected to.
4. Install the Dante Firmware Update Manager.
5. Run the Dante Firmware Update Manager. Press "Browse" to locate the update file previously downloaded. DO NOT check the "Override Device Matching" box.
6. The Firmware Update Manager will search for Dante devices on the network. When the list appears, select the checkbox for your MIX-16/32 and click the "Start" button. The update will take a few minutes.
7. When the update is finished, turn off the power to your MIX-16/32 and restart it.

DANTE CARD FIRMWARE UPDATE TROUBLESHOOTING

If no devices are found in step 6:

- Make sure the MIX-16/32 is plugged in and turned on
- Make sure your computer is connected to the same network as the MIX-16/32
- Make sure there are no firewall settings blocking a connection to the MIX-16/32