

MIX-16/MIX-32 FIRMWARE UPDATE

MIX-16/MIX-32 FIRMWARE UPDATE INSTRUCTIONS

The MIX-16/MIX-32 can be updated with a CS-SOLO/CS-DUO or a PC application.

You can update with a CS-SOLO if:

- The MIX-16/MIX-32 serial number is greater than 12-02-01030
- The MIX-16/MIX-32 firmware is 1.01 or above
- The CS-SOLO/CS-DUO firmware is 1.31 or above

Livemix Version Info		X
CS Version	Bootloader: 1.04 Firmware: 2.00 Comm Hub: 1.00	Update Firmware
MIX-16/32 Version	Bootloader: 1.20 Firmware: 2.00	Update Firmware
DA-816 Version	Firmware: 1.10 Firmware: 1.10	
Dante Version	15.2.24.163	

If your MIX-16/MIX-32 does not meet the criteria above, update with a Windows PC application. In most cases, this will bring your MIX-16/MIX-32 up to date and subsequent updates can be performed with the CS-SOLO/CS-DUO. For reference, both methods are listed below.

UPDATE FIRMWARE OF MIX-16/MIX-32 WITH THE PC APPLICATION:

1. Update all CS-SOLOs and CS-DUOs to the latest version per the instructions above.
2. Download the MIX-16/MIX-32 Update Application from <http://www.digitalaudio.com/support>.
3. Connect the USB port on the MIX-16/MIX-32 to a Windows computer.
4. Wait for MIX-16/MIX-32 drivers to fully install.
5. Run MIX-16/MIX-32 Update Application. A second set of drivers will be installed at the start of this process and may take a few minutes. Once the updater has started, a progress bar will appear. Do not turn off the power until the update is complete or you may damage the unit.
6. PRESS Finish.
7. Disconnect the MIX-16/MIX-32 from the PC and verify the update was successful by checking the firmware version with the CS-SOLO/CS-DUO.

UPDATE MIX-16/MIX-32 FIRMWARE WITH A CS-SOLO OR CS-DUO:

1. Download the latest firmware: <http://www.digitalaudio.com/support>.
2. Unzip the firmware zip file and copy the LMUPDATE folder to the root directory of a USB flash drive. Please verify the LMUPDATE folder is not in another folder.
3. Go to Livemix Version Info by pressing Mix Tools, Global Configuration and then Livemix Version Info.
4. PRESS Update MIX-16/MIX-32 Firmware.
5. PRESS Yes to update, or No to cancel.
6. Insert USB flash drive containing the update, when prompted. PRESS Continue or Exit to cancel. Once the update has begun, do not turn off the power to the MIX-16/MIX-32 or you may damage the unit.

NOTE:

If updating with the CS-SOLO or CS-DUO does not work, please use the PC Application.

Some updates take a while to complete. If updating the MIX-16/MIX-32 from the CS-SOLO/CS-DUO, it works best to have only one personal mixer connected.